



TransLogic® Pneumatic Tube System Carriers and Accessories

Carrier Features and Benefits

Swisslog Healthcare TransLogic Carriers safely and reliably transport lab specimens, IV bags, pharmaceuticals, documents, supplies and other materials throughout the hospital's pneumatic tube system. These high-quality carriers protect contents as they travel and are easy to load and unload.



- 1 Solid and Durable**
Constructed of impact-resistant plastic to withstand daily use while protecting contents.
- 2 DuraBand®**
Long-life wear bands improve transport stability and reduce carrier maintenance.
- 3 Easy Access**
Side-opening carriers provide easy access to contents.
- 4 Trackable**
RFID-enabled carriers provide secure transport and traceability.
- 5 Leak-Resistant & Sealed Carriers**
Specialty carriers provide an additional level of safety for transport of biohazards, sensitive medications and other materials.

Carrier Types

Three different carrier types meet the individual departmental needs of hospitals.



NexSeal™ EL

One-step closure, leak-resistant carriers help prevent spills and the potential spread of pathogens. Lighter weight carrier opens wide with increased capacity.



EcoSeal®

Leak-resistant carriers can contain liquids and hazardous materials.



Universal

Standard, side-opening carrier, with the same durable material as our premium carriers.





**The TransLogic
NexSeal EL carrier
is the easiest to
use leak-resistant
carrier available.**

Carrier Options

Swisslog Healthcare offers a variety of carriers for both four- and six-inch pneumatic tube systems. Carriers are available in various color and feature combinations for use in TransLogic and competitor systems.

Available Carrier Options Include:

RFID Tag – Option to enable tracking and management of contents and origination/destination stations.

Half-Color – Carriers allow viewing of carrier contents while providing easy color identification of department-specific uses. Carriers can also be ordered with frosted ends for Quantum systems.

6-Inch Carriers

TransLogic systems with high-capacity dispatchers transport 6-inch carriers at an average of 20 feet per second. Payload information below represents transport within a TransLogic pneumatic tube system. Competitor system capacity may be limited by the manufacturer.



Carrier	Net Payload (TransLogic Standard Dispatcher/High-Capacity Dispatcher)	Overall Length
NexSeal EL, EcoSeal, Universal	4.8 lbs (2.18 kg) / 12.5 lbs (5.67 kg)	16 in (40.64 cm)

4-Inch Carriers

TransLogic systems with high-capacity dispatchers transport 4-inch carriers at an average of 25 feet per second. Payload information below represents transport within a TransLogic pneumatic tube system. Competitor system capacity may be limited by the manufacturer.



Carrier	Net Payload (TransLogic Standard Dispatcher/High-Capacity Dispatcher)	Overall Length
NexSeal, Universal	2.4 lbs (1.09 kg) / 5 lbs 9 oz (2.68 kg)	15.5 in (39.37 cm)



Carrier Accessories and Secondary Containment Materials

In addition to the comprehensive line of carrier options, Swisslog Healthcare offers a full array of liners, secondary containment and cleanout kits for use with your pneumatic tube system carriers.

Containment materials used with conscientious processes for safe handling and infection control ensure successful PTS transport without incident.



Zip N' Fold Pouches

Provide maximum protection from spills


Carrier Liners

Provide cushioned support for payload transport



Pneumatic Tube System Accessories

Swisslog Healthcare pneumatic tube system accessories aid in security, noise reduction and storage.

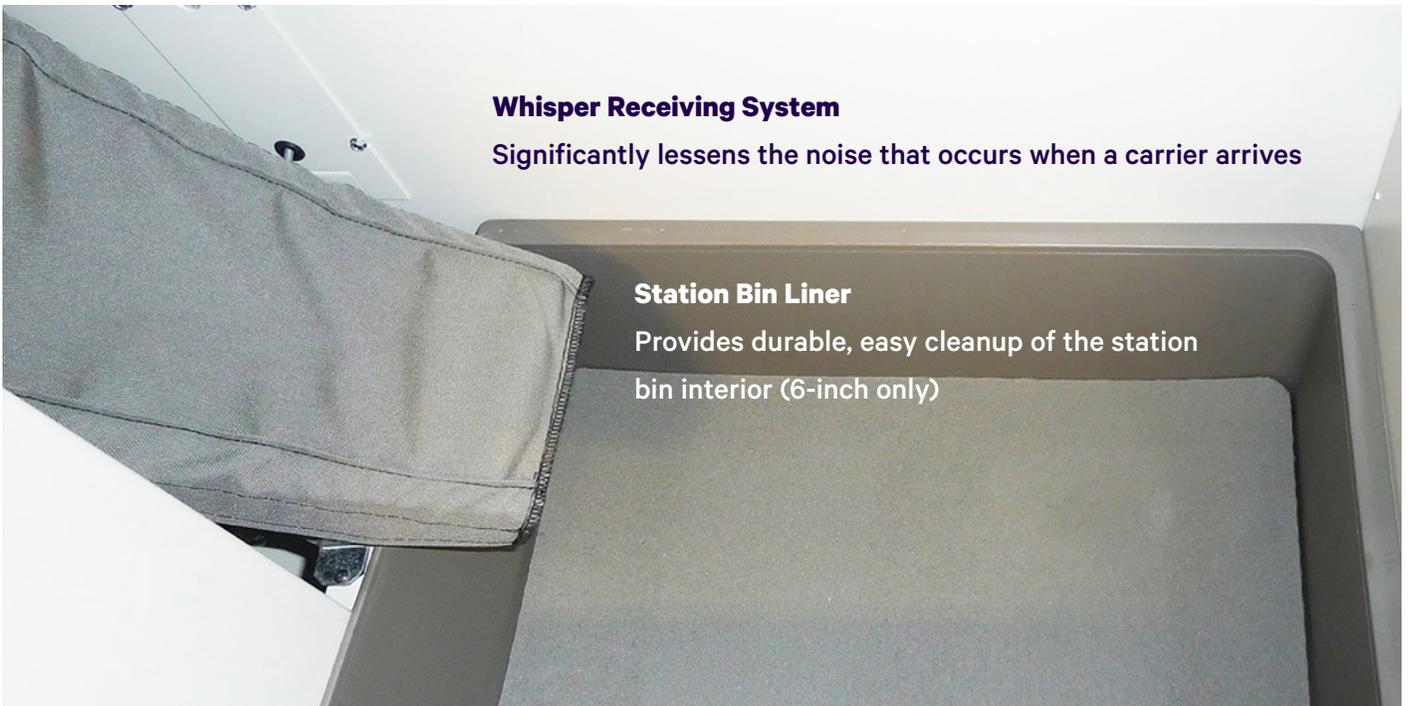

Chain-of-Custody Solutions

Swisslog Healthcare offers a complete product suite for ensuring chain of custody to complement TransLogic pneumatic tube systems. Facilities utilizing our products with RFID and the WhoTube® Card Access System have the ability to track and control carrier movements and specific user access.

Contact our Customer Support team to learn more.

swisslog-healthcare.com/support





Ordering Carriers & Carrier Accessories

Order online at parts.swisslog-healthcare.com or contact our Customer Care department at 800.396.9666 (option 3).

CONTACT

Swisslog Healthcare
healthcare.us@swisslog-healthcare.com
800.396.9666, option 3
Canada: 877.294.2831 | 905.629.2400
swisslog-healthcare.com/translogic

Swisslog Healthcare conducts ongoing product improvements, therefore technology designs may change without notice or obligation. TransLogic, NexSeal, EcoSeal, DuraBand and WhoTube are trademarks registered in the US Patent and Trademark Office. Swisslog Healthcare systems may be covered by one or more patents. See swisslog-healthcare.com/patents for details.

© 2022 Swisslog Healthcare NAM EN 032022 PTS-210, PN 1001041176 Rev A